

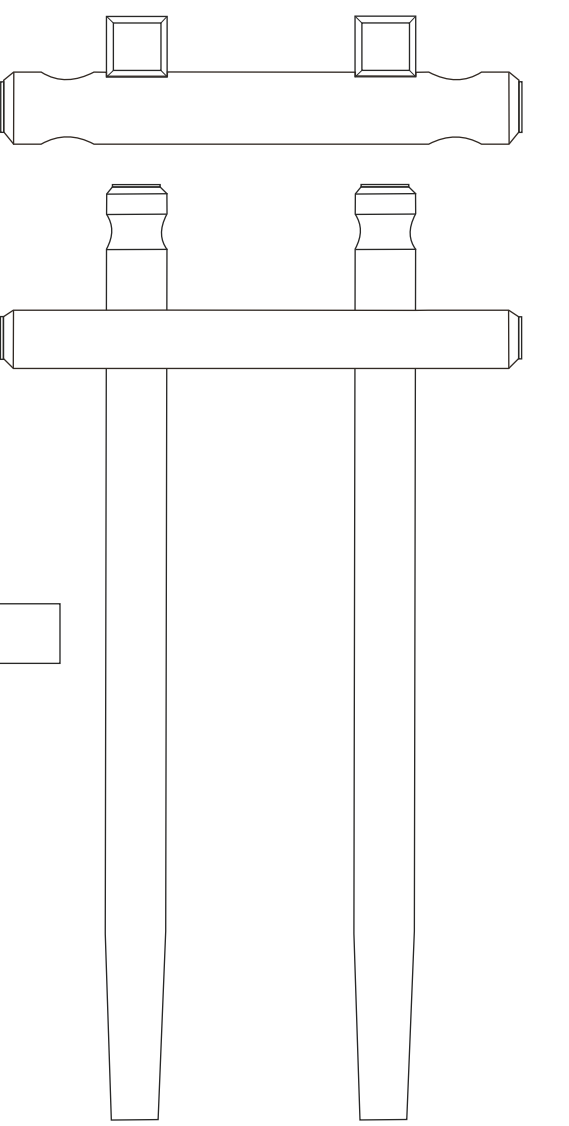
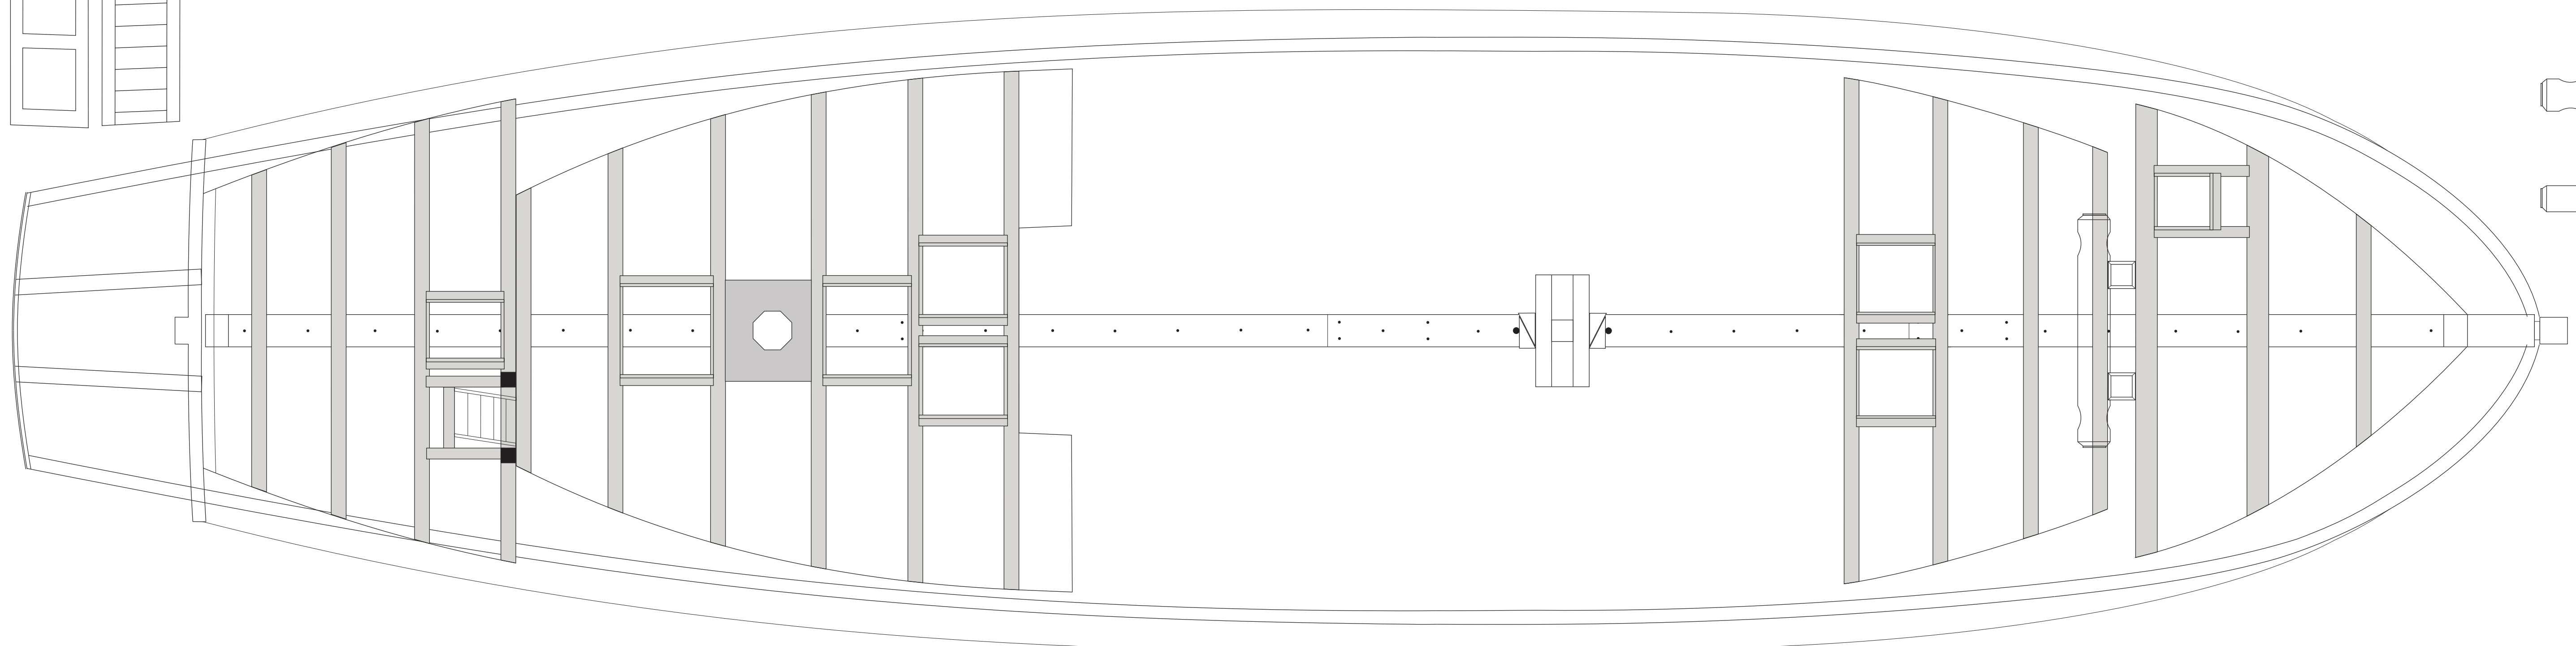
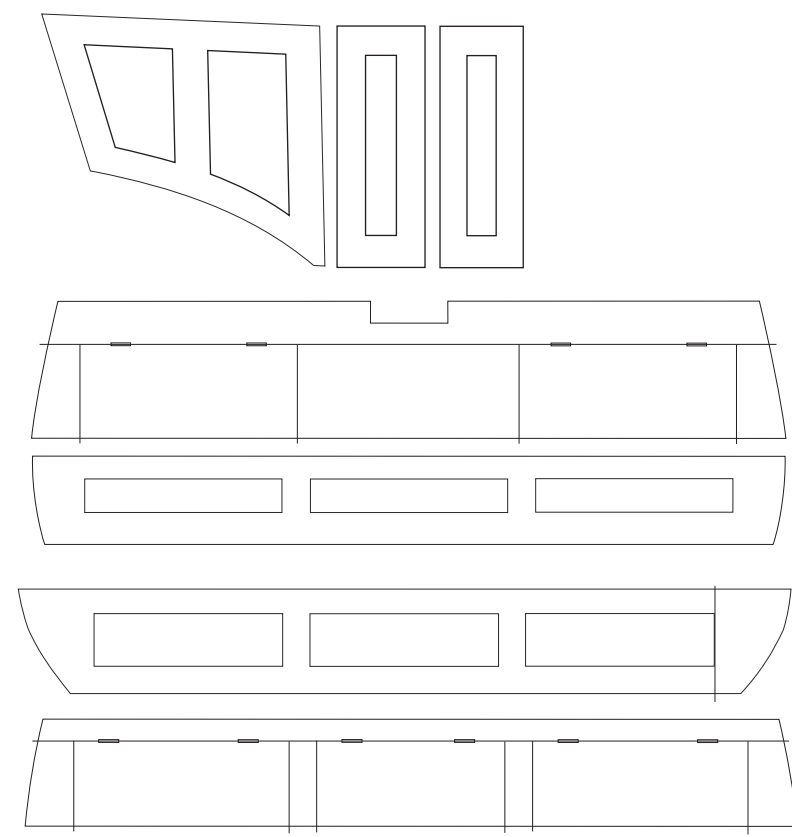
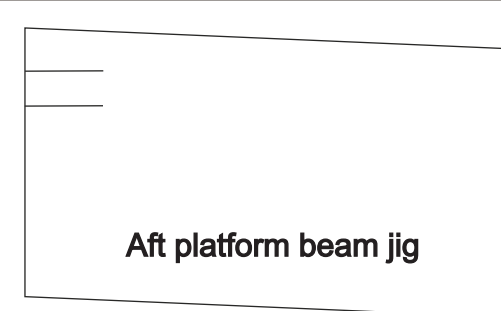
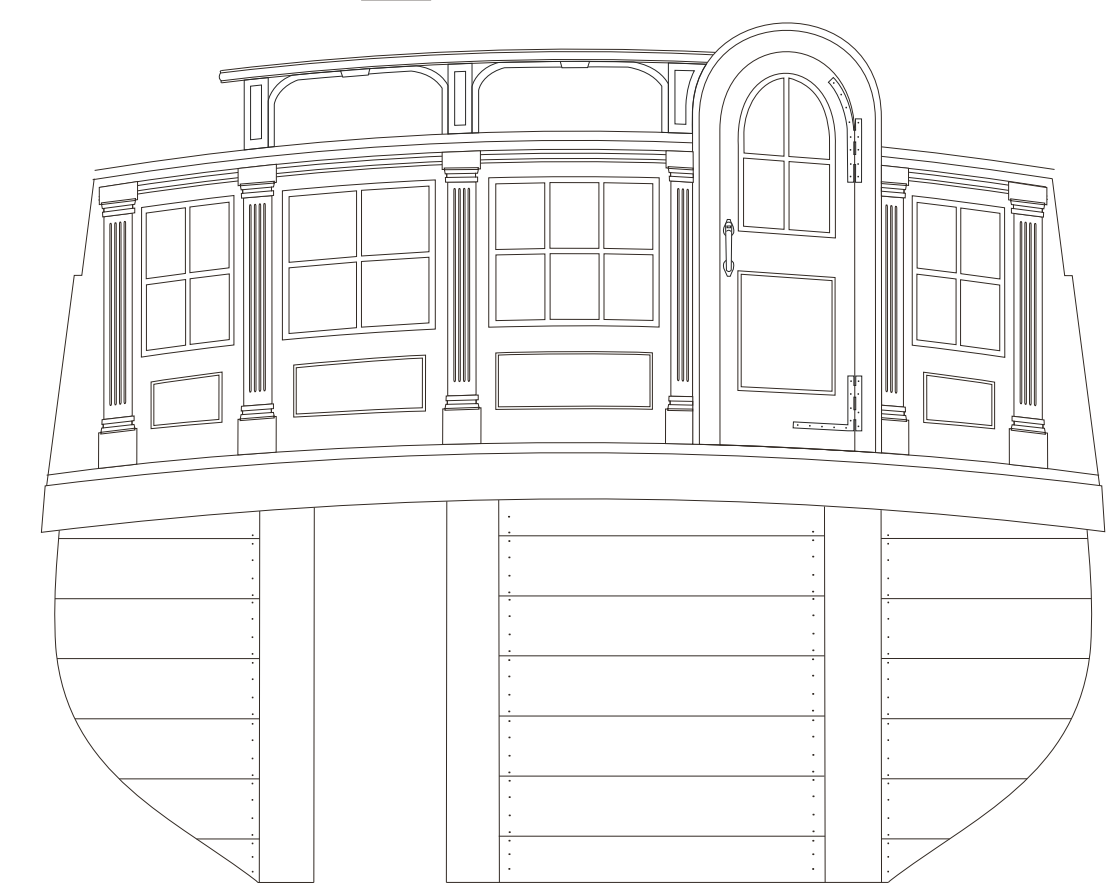



Great Cabin Closets

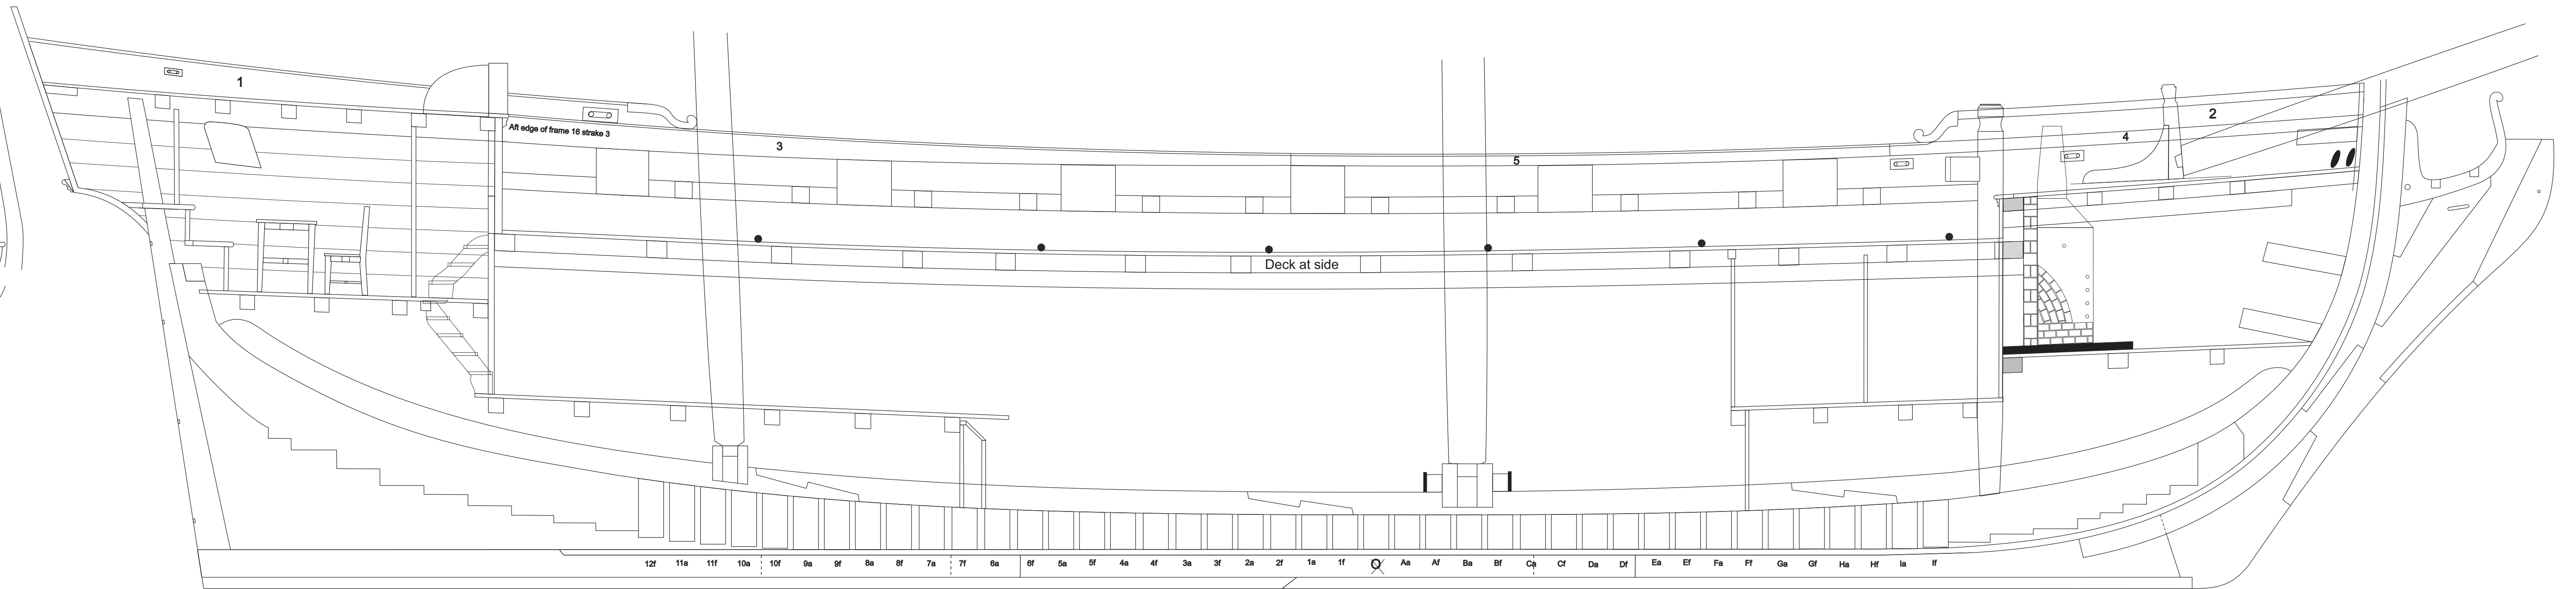


Riding Bits

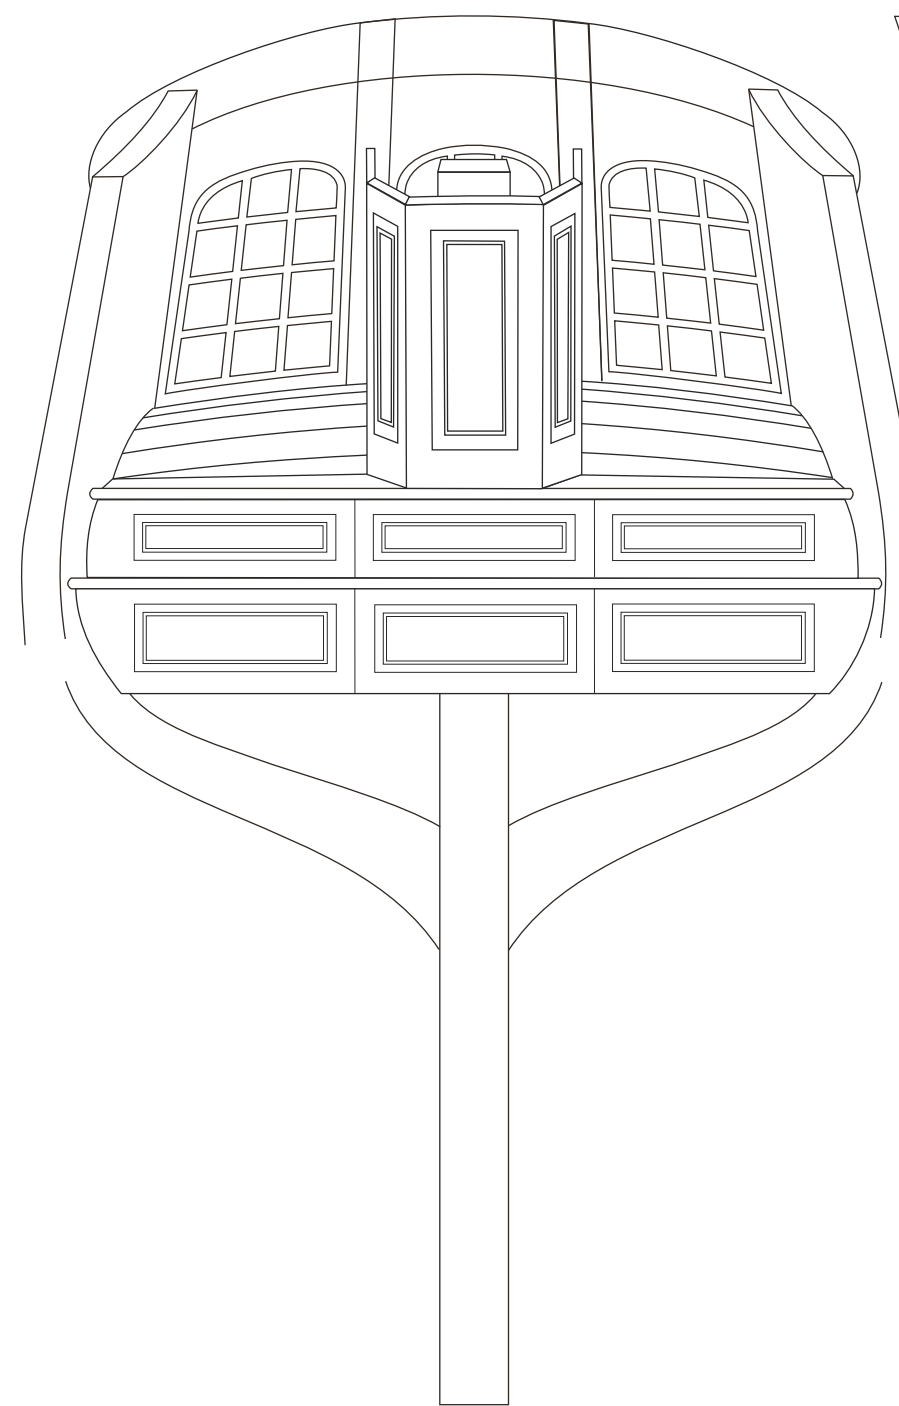

Aft platform beam jig

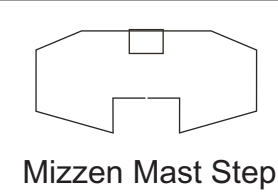



Mizzen Mast Step

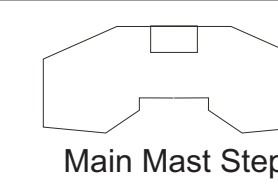


Main Mast Step



Forearbottom

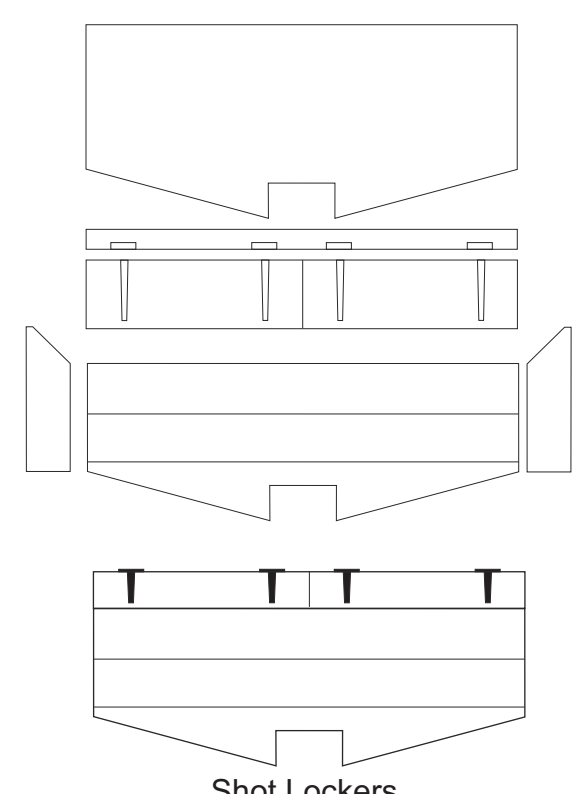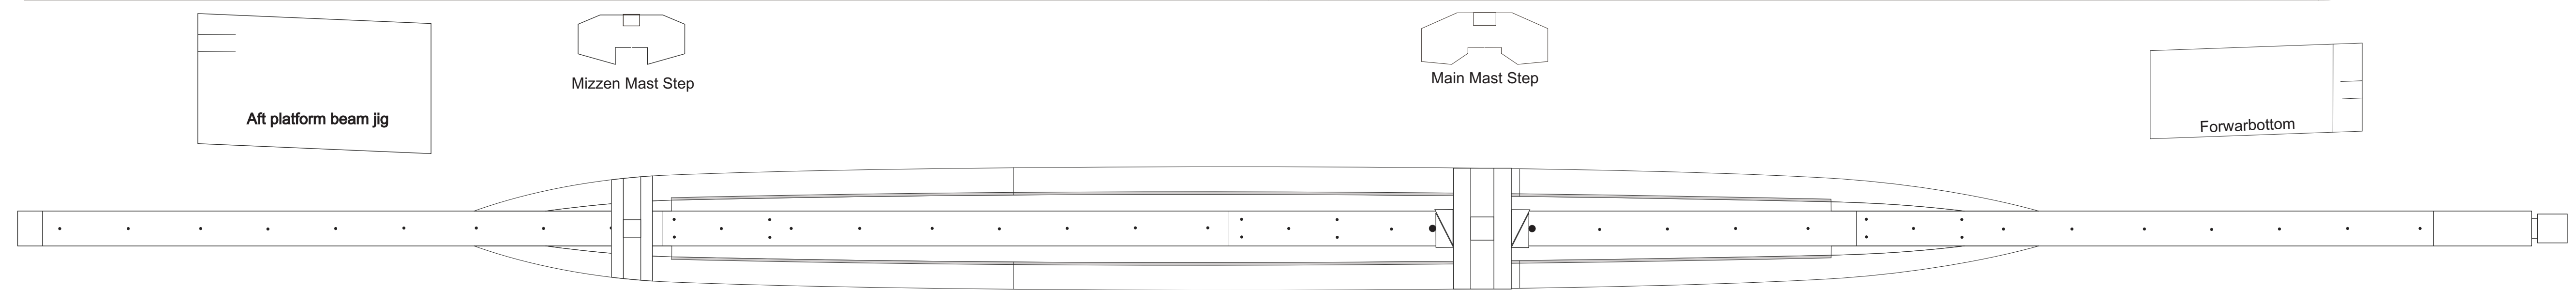


Shot Lockers




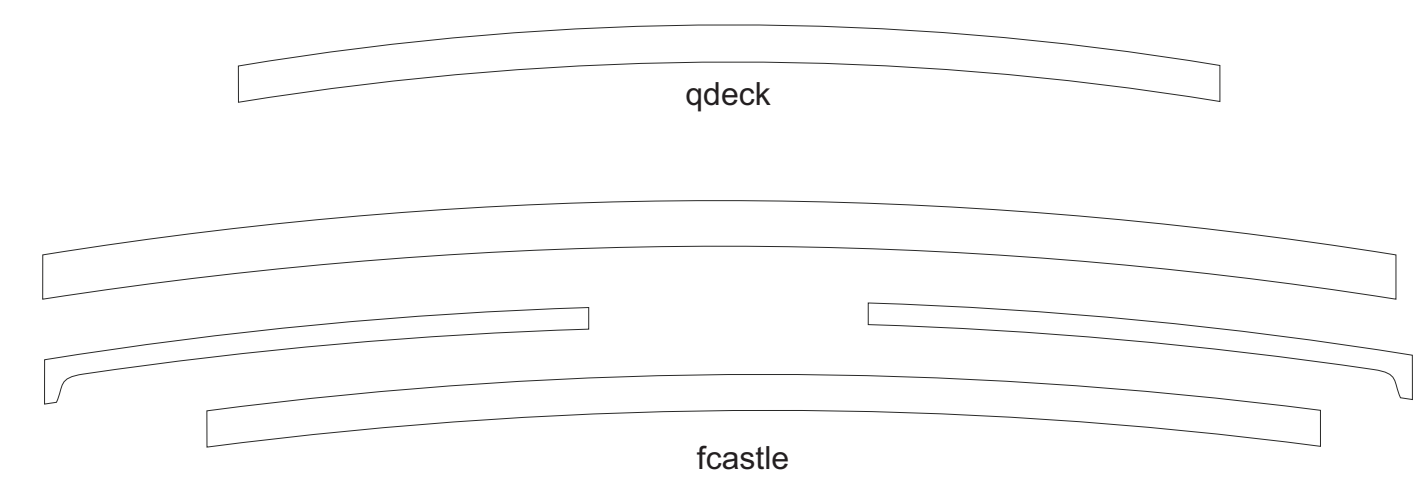


qdeck

fcastle

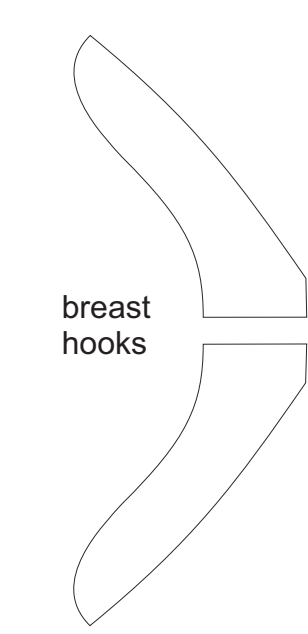

breast hooks

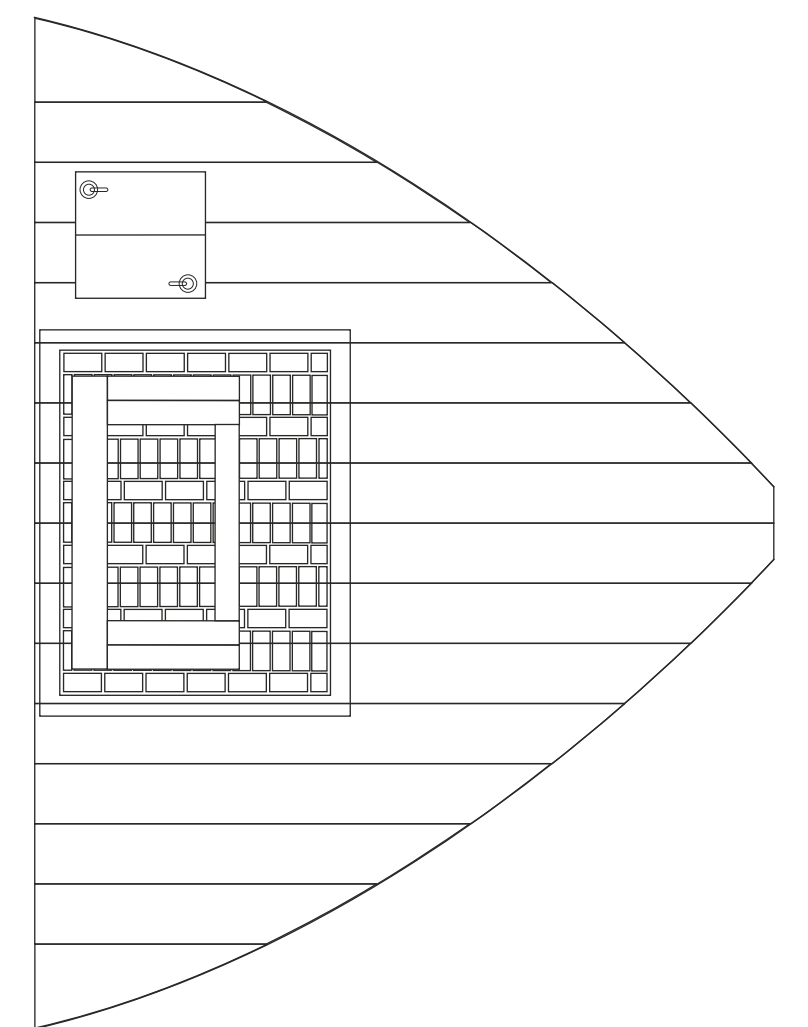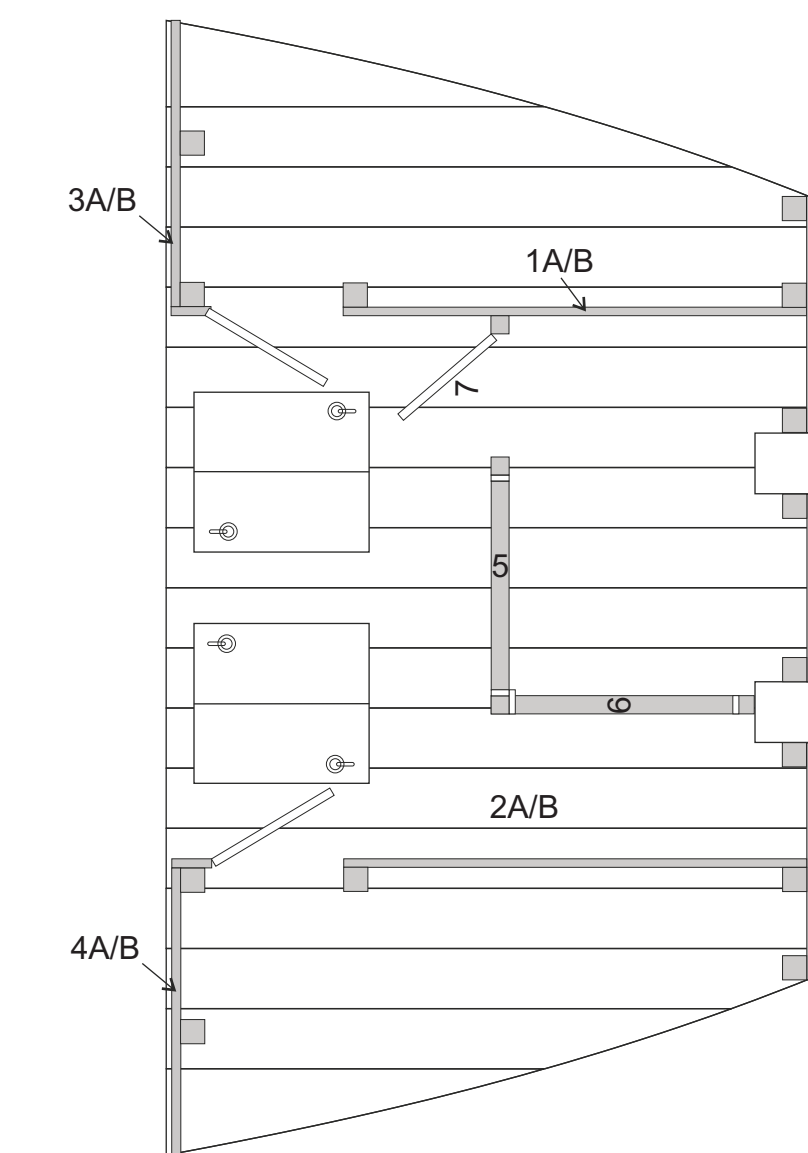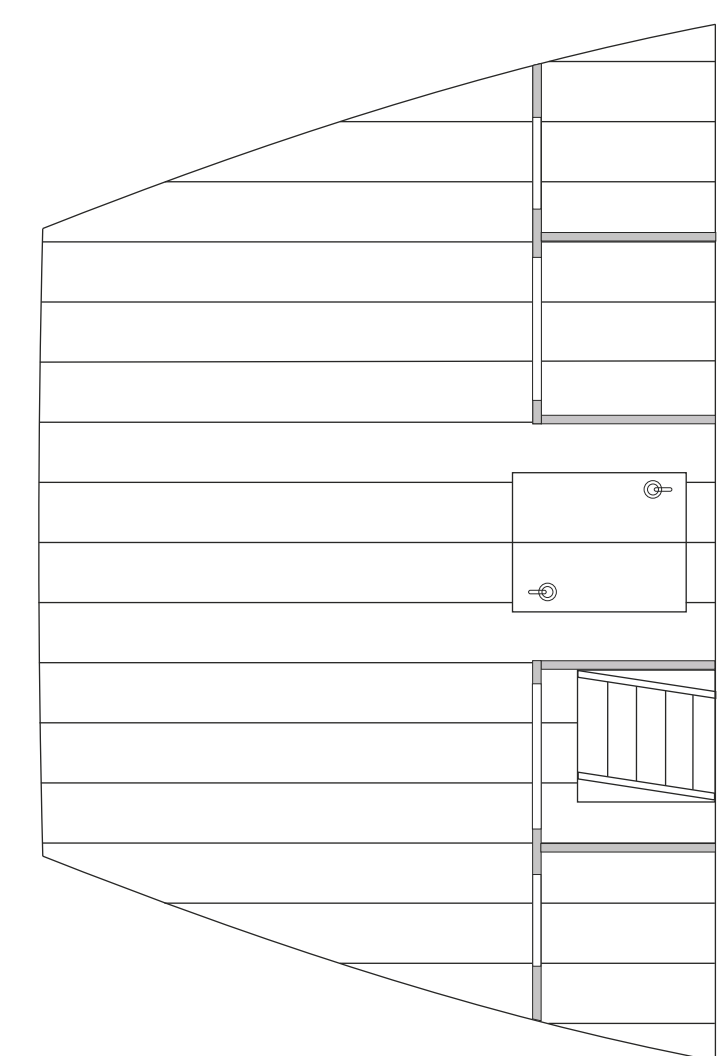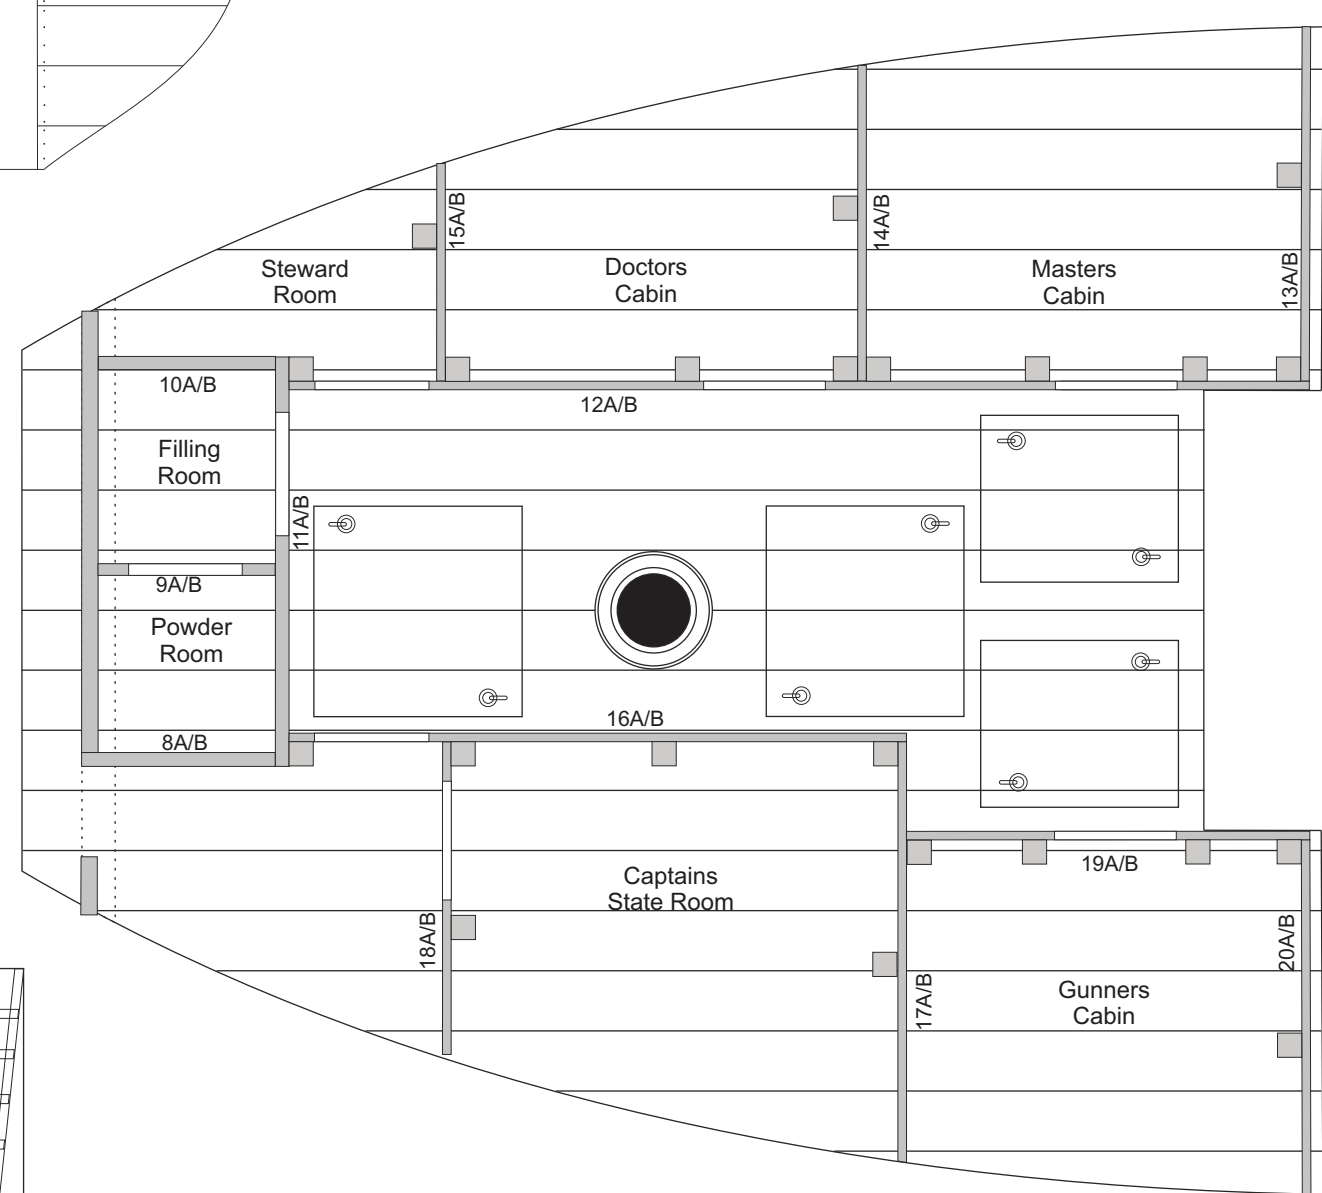


The Ketch Rigged Sloop Speedwell 1752

Sheet three - 3/8" equals 1 foot

Copyright 2023

Plans and kit design by Chuck Passaro

Based on the Seawatch Book written by David Antscherl

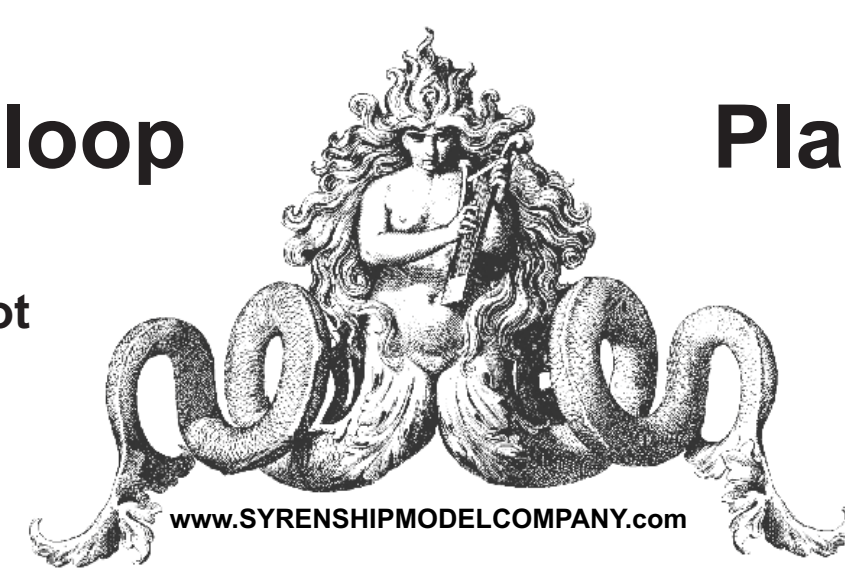

www.SYRENSHIPMODELCOMPANY.com

